



TinySeats Car Seat is ECE R44.04 ISOFIX Semi Universal

Group 0+ (0 – 13 kg)

Group I (9 – 18 kg)

Universal group II (15-25 kg)



Manual - English




Read more and watch installation movies at our website

Contents

Parts	4
Important information	7
<i>Configurations:</i>	
Forward	12
Rearward	14
Harness	16
Booster	17
Fold and release	18
Contact	20
Maintenance	21

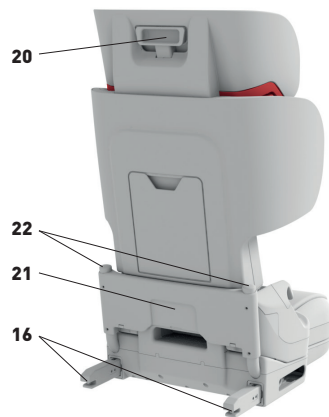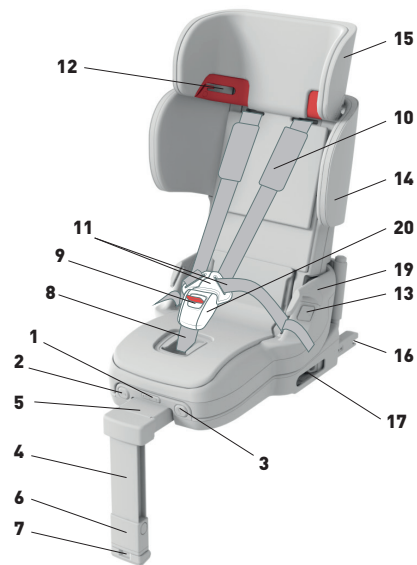

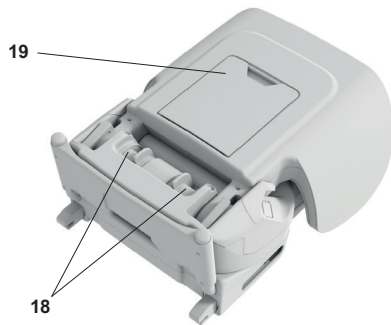

- 1 TinySeats logo
- 2 ISOFIX adjustment button
- 3 Seat base release button
- 4 Support leg
- 5 Lock indicator

- 6 Support leg extension lock
- 7 Support leg indicator
- 8 Buckle
- 9 Harness
- 10 Shoulder pads
- 11 Harness tongues
- 12 Shoulder belt guide
- 13 Belt releaser
- 14 Backrest
- 15 Headrest
- 16 ISOFIX hooks
- 17 ISOFIX pull release
- 18 Back rest lock release buttons
- 19 Manual storage/instruction manual
- 20 Headrest and harness height adjust lever
- 21 Rebound bar
- 22 Rebound bar release buttons

Please study this User Guide completely
before installing your child car seat.

Important Information

It is very important to follow these instructions carefully and correctly. If this seat is not fitted securely and your child is not strapped in correctly, your child and other passengers are at serious risk of injury in the event of an accident

- TinySeats must only be used with a lap and diagonal seat belt approved to UN/ECE Regulation no. 16 or other equivalent standards.

- Plan to spend some time getting to know your car seat: time well spent when you consider that your child's safety depends on it. Pay special attention to the warnings.
- Keep this Owner's Manual always with the car seat.

Notice

- 1** European Safety Standards specify the construction and performance of your car seat as well as its components, requirements for fitting and use, instructions and markings. Your car seat has been approved to European Standard ECE R44.04 suitable for 0-25 Kg. Group 0+ I II.
- 2** Harness systems cannot be designed to be completely “child proof” and yet comply with the legal requirements of European Standard ECE R44. The harness must always be fastened and adjusted correctly, and children encouraged to remain within the harness system.
- 3** The cover and shoulder pads are a safety

feature. Never use the child seat without them. Don't put your child's safety at risk by using other makes of replacement cover, they could stop the child seat from protecting your child as well as it should. A replacement cover is available at tinyseats.com

- 4** *DO NOT* under any circumstances use a rearward facing child seat on a passenger seat fitted with an active airbag.
- 5** *DO NOT* use a forward-facing child seat on a passenger seat fitted with an active airbag unless your vehicle manufacturer confirms that it is safe.
- 6** *DO NOT* use the child seat on side facing

or rearward facing vehicle seats.

- 7** DO NOT use anything, such as a cushion or coat, to raise the child seat off the passenger seat. In an accident the child seat and your car seat belts would not be able to protect your child as well as they should.
- 8** DO NOT attempt to dismantle, modify or add to any part of the child seat or change the way its harness or your car seat belts are made or used. The official approval is no longer valid if modifications are made.
- 9** DO NOT allow children to play with or adjust the child seat.
- 10** DO NOT leave your child seat in direct sunlight. Fittings can become hot to touch in sunny weather and the cover may become faded.
- 11** DO NOT use the seat unless you adjust the harness to fit the clothes your child is wearing – a fitting for winter clothes may be too slack for a child wearing summer clothes.
- 12** DO NOT place heavy objects on top of the seat and do not store it near direct heat sources or in direct sunlight.
- 13** DO NOT leave loose objects, such as luggage or books, in the back of your car. They must be properly secured, because if you must stop your car suddenly loose objects will keep moving and can then cause serious injuries. Large and heavy loose objects are a particular risk.
- 14** DO NOT leave folding passenger seats unlatched. If you must stop your car suddenly a loose seat back could injure your child.



ISOFIX Child Restraint System
Group 0+ (0-13KG),
ISOFIX Child Restraint System 1 (9-18KG)

Notice

1. This is ISOFIX CHILD RESTRAINT SYSTEM. It is approved to Regulation No.44.04 series of amendments for general use in vehicles fitted with ISOFIX anchorages systems.
2. It will fit vehicles with positions approved as ISOFIX positions (as detailed in the vehicle handbook), depending on the category of the child seat and of the fixture.
3. The mass group and the ISOFIX size class for which this devices is intended is: Group 0+(0-13kg)D, Group 1(9-18KG) B1.
4. We do not recommend to place children under the age of nine months in the product.



Universal Child Restraint System
Group 2 (15-25KG) 3-Point belt

Notice

1. This is a "Universal" child restraint. It is approved to Regulation No.44.04 series of amendments for general use in vehicles and it will fit most, but not all car seat.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
4. If in doubt, consult either the child restraint manufacturer or the retailer.



Semi-Universal Child Restraint System
Group 0+ (0-13KG) Group 1 (9-18KG)

This Child restraint is classified for "(Semi-Universal)" use and is suitable for fixing into the seat positions of the following cars:

CAR	FRONT	REAR
(Apply to all vehicles with ISOFIX anchorages)	Outer	Outer Center
	No	Yes No

Seat positions in other cars may also be suitable to accept this child restraint. If in doubt, consult either the child restraint manufacturer or the retailer.

SEE PICTURES (A1- A18) IN PICTURE MANUAL

Installing your TinySeats in forward facing GROUP I (9-18 KG)

IMPORTANT – DO NOT USE FORWARD FACING
BEFORE THE CHILD'S WEIGHT EXCEEDS 9 KG

- 1** Push slightly inwards on top of Support Leg to release. (A1) The leg will be fully extended when the green indicator label is visible on the top of the support leg stem. (A2) Lift base to retrieve Support Leg from cavity and pull forward. (A3) Allow the support leg to fully rotate downwards. (A4)
- 2** Release ISOFIX connectors by pressing the ISOFIX release button found on the front

of the base. (A5) Both hooks simultaneously protrude from the rear of the base - ensure they are fully extended. (A6)

- 3** Locate ISOFIX anchorages on the vehicle seat to line up with the ISOFIX connectors. (A7) Push the Base toward the anchor points until the connectors are connected. (A8) You will hear a click. Push the release ISOFIX button. User can then push the Base fully back towards rear of seat to secure and engage the Rebound Bar. Press firmly against the vehicle seat until the base feels stable and firmly secured. (A8) Check that both sides are

connected to the vehicle by pulling the base forward and move from side to side. There should be green indicators visible to confirm connection. (A9) If red is visible the connector is still open.

- 4 Press the release buttons on the side of the support leg to extend the lower section of the support leg. (A10) Support leg should be vertical and extend to meet the floor of car (A11), check indicator on foot to make sure it is green & in full contact. (A12-13) If the leg does not lock when reaching the floor, it is between lock positions. Then lift the base slightly and lock into the lower

position.

- 5 To open the seat out, squeeze both buttons pictured together. (A14) User can now raise backrest to upright. (A15-16)
- 6 Headrest can be adjusted into position by using the button at the rear of the headrest so that the harness shoulder straps are level with or over the child's shoulders. (A17-18)

Warning. Must not be below the shoulders when forward facing. Please see Harness adjustment and stowage on page 16.

SEE PICTURES (B1- B24) IN PICTURE MANUAL

Installing your TinySeats in rearward facing GROUP 0+1 (0-18 KG)

- 1** Push slightly inwards on top of Support Leg to release. (B1) The leg will be fully extended when the green indicator label is visible on the top of the support leg stem. (B2) Lift base to retrieve Support Leg from cavity and pull forward. (B3) Allow the support leg to fully rotate downwards. (B4)
 - 2** Release the seat from the base by pushing the release seat button (B5). Lift the seat straight upwards (B6)
 - 3** Push buttons on top of the rebound bar (B7) and extend the bar to top position (B8)
 - 4** Release ISOFIX connectors by pressing the ISOFIX release button found on the front of the base. (B9)
- Both hooks simultaneously protrude from the rear of the base
- 5** Ensure they are fully extended and locate ISOFIX anchorages on the vehicle seat to line up with the ISOFIX connectors. Push the Base toward the anchor points until the connectors are connected. (B10) You will hear a click.
 - 6** Push the release ISOFIX button again. (Same as B9) User can then push the Base fully back towards rear of seat to secure and engage the Rebound Bar. Press firmly against the vehicle seat until the base feels stable and firmly secured. (B11) Check that both sides are connected to the vehicle by

pulling the base forward and move from side to side. There should be green indicators visible to confirm connection. (B12) If red is visible the connector is still open.

- 7** Press the release buttons on the side of the support leg to extend the lower section of the support leg. (B13) Support leg should be vertical and extend to meet the floor of car (B14), check indicator on foot to make sure it is green & in full contact. (B 15-16) If the leg does not lock when reaching the floor, it is between lock positions. Then lift the base slightly and lock into the lower position.
- 8** It is necessary to install the car seat in the recline position for rearward facing. To do this you must deploy the recline wedge. Ensure the recline wedge is deployed for Rearward facing, before placing seat on base by pulling it forward to its extent. (B17)

- 9** Place the seat on the base facing opposite to the direction of travel. Secure the seat onto both hook positions on base (B18.) this will lock the seat in place. (B19)

- 10** To open the seat out, squeeze both buttons pictured together. (B20) User can now raise back rest to upright. (B21-22)

- 11** Headrest can be adjusted into position by using the button at the rear of the headrest. (B23) Same applies as for forward facing

Warning. Must not be above the shoulders when rear facing. • Please see Harness adjustment and stowage on page 16.

- 12** Seat is now set up for rearward facing use. Should be able to see Recline Wedge and seat should be at optimum angle for Rearward facing. (B23-24)

SEE PICTURES (C1- C6) IN PICTURE MANUAL

Securing Seat Harness and Adjusting

- 1** Adjust the height of the headrest and thereby the harness to suit the child. (C1)

Note that in rearward facing the strap slot should be level or below the shoulder. For forward facing the slot should be level or above the shoulder (diagram)

- 2** Pull out any excess harness by releasing the adjuster lock on each side by pressing on the red button. (C2)

- 3** Place the harness over the child's shoulders and lap and connect the harness tongues together and insert into the buckle until you hear a click. (C3-5)

Ensure the shoulder pads and straps are snug on the shoulders and lap before tightening the harness.

- 4** Pull on the harness free end on each side of the seat to tighten harness. (C6) The tension should only allow two fingers to pass between the harness and the child's body.

SEE PICTURES (D1- D12) IN PICTURE MANUAL

Using your TinySeats as a booster

GROUP II (15-25 KG)

- 1** To release set from base press the release seat button. (D1) Lift seat straight upwards (D2)
- 2** To open the seat out, squeeze both buttons pictured together. (D3.) User can now raise backrest to upright. (D4-5)
- 3** Lift the upper backplate and let the harness run behind the padded area. (D6) Lift the cushion on the seat and store the harness tongue in the cavities under the cushion. (D7)
- 4** Extract the adult seat belt. Insert the diagonal strap into the red shoulder belt guide on the head rest. (D8-9)
- 5** With the child in the seat pass the adult belt across the child and insert the tongue into the buckle. (D9-10)
- 6** Ensure the lap portion of the adult belt passes under the belt guides on the seat base. Ensure the diagonal portion of the adult seat belt passes over the lap belt guide on the buckle side. (D11)
- 7** Ensure the lap belt passes across the lap and is supported on the pelvis. (D12) Check that there are no twists or slack in the belt.

SEE PICTURES (E1- E4) IN PICTURE MANUAL

Folding the seat

- 1** To fold down, lower the head rest. (E1)
- 2** Locate the buttons under fabric covers and squeeze them together (E2) then fold. (E3)
- 3** Seat is now folded down and can be removed or stowed away. (E4)

SEE PICTURES (F1- F10) IN PICTURE MANUAL

Removing the base

- 1** To release the base locate the end of the ISOFIX connectors. (F1)
- 2** Pull firmly in the ring towards front. (F2)
- 3** The base will now come lose from the ISOFIX anchorage of the vehicle. (F3)
- 4** Push the button on top of the rebound bar. (F4)
Press the rebound bar downwards. (F5)
- 5** Push the release ISOFIX button. (F6)
- 6** Pull until the ISOFIX connectors are completely intruded into the base. (F7-8)
- 7** Press the release buttons on the side of the support leg to raise the lower section of the support leg. (F9)
- 8** Allow the support leg to fully rotate inwards and push the support leg into cavity. (F10)

If indoubt

Not all car seats fit all cars. For advice as to the suitability of this restraint for your car please use on our website at www.tinyseats.com

Contact:
connect@tinyseats.com
TinySeats Europe AB
Box 3
438 05 Hindås
Sweden

Looking after your child seat

DO regularly check all child restraints for wear and tear. Food and drink may find their way inside the buckle of the harness. This can stop it from working properly.

CLEANING THE HARNESS AND SEAT SHELL.

Sponge clean ONLY using hand soap and warm water.

- DO NOT lubricate or oil any part of the seat.
- DO NOT take apart, or attempt to take apart, any part of the harness or seat when cleaning.
- DO NOT use solvents, detergents or washing up liquid as these may weaken the harness and the seat

CLEANING THE COVER

The seat cover can be removed and washed by hand.

Do not put the cover in a dryer as this can damage the cover and the padding may separate from the fabric.

Please read the labels on the cover for washing instructions.

Guarantee

All our products are carefully designed, manufactured and tested. However, should this product prove faulty within 24 months of purchase due to a materials or manufacturing fault please return it to the original place of purchase. We will then, at our discretion replace it with the same or a similar product.

For guarantee purposes proof of purchase will be required. We recommend that you retain your receipt and attach it to this user guide and store in the seat. TinySeats does not accept liability for damage arising from abuse, misuse or negligence.

This guarantee is not transferable and therefore does

not apply to second-hand products. Your statutory rights are not affected by this guarantee.

TinySeats, whilst considering child car seat contact with vehicle seats throughout the development of new products, cannot accept responsibility for damage occurring to vehicle seats or seat belts.





Read more and watch installation movies at our website

